

ISO 9001:2008 / ATEX



## Multifunction O/E Converter PSN-TDN-LWL-OP

Housing M18





RECOGNIZED BY UNDERWRITER'S LABORATORIES INC. ONLY AS TO NON-SPARKING SAFETY FOR USE IN CL I, DIVISION 2, GR CD, T4A File No.E300158

- Function selectable between dynamic rotation speed detection, with plausibility observation and as static proximity switch for needle detection
- Simple connection of synthetic fibre optics (POF) without special tools Rotational speed detection up to 100'000 RPM (At 4 pulses / round)
- Short response time and very high sensitivity as proximity switch
- Applicable in CL. I, Division 2, Groups C and D Hazardous Locations
- Applicable in Ex Zones 2 and 22. Optical radiation can operate
- into hazardous locations 1, 21 Visible laser emitter, reil 650nm

II 3(2)G Ex nA [op is Gb] IIB T4 Gc

II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67

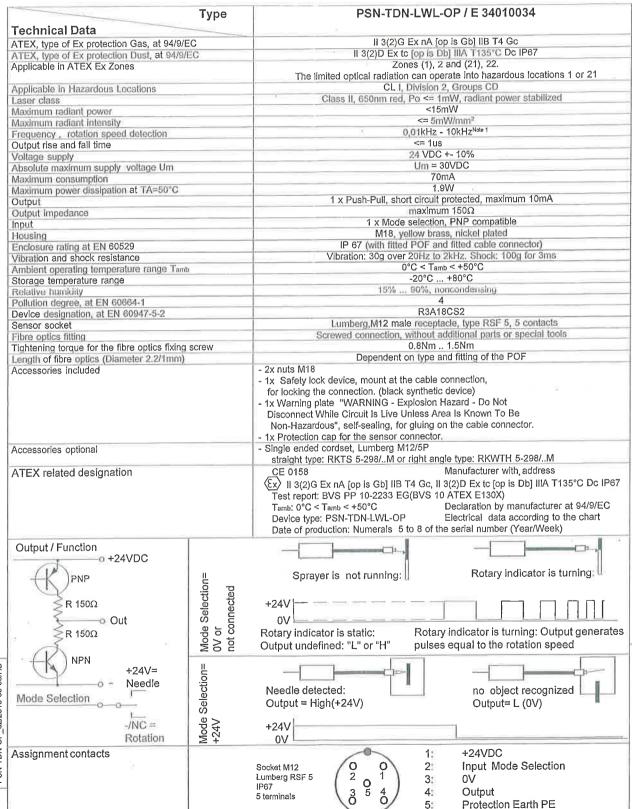

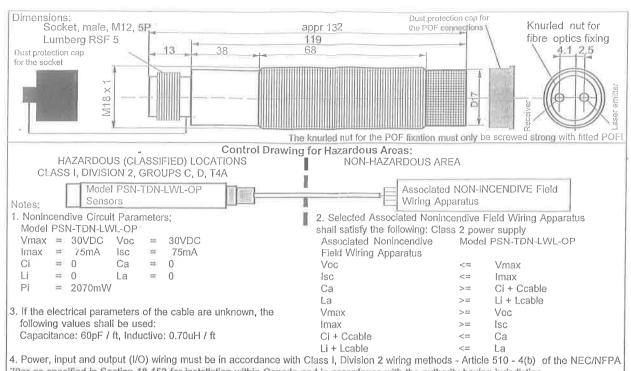

70or as specified in Section 18-152 for installation within Canada and in accordance with the authority having jurisdiction, Operating Manual / EC - Declaration of Conformity:

INSTALLATION INSTRUCTIONS FOR HAZARDOUS LOCATIONS: The functional safety of the sensor is given by the condition of the A. "WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COM-PONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2" B: "WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIR-ING MODULES!

C. "WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.

Provides nonincendive field circuits when installed per the installation instructions. The local equipotential bonding have to be done. The PE/ PA connection (terminal 5 of the cordset) and the cable shield must be connected reliable and noncorrosive to PE. The PE terminal and the socket are solid connected to the housing. ONLY Lumberg cordsets RKTS 5-298/..M (Straight type) or RKWTH 5-298/..M (Right angle type) are allowed. The cable have to be installed and protected against damages. The cable with termination fittings, or in cable tray systems and installed in a manner to avoid tensile stress at the termination To connect cables inside hazardous locations only use certificated Ex e housings. All cable terminals must be connected outside hazardous locations. Other then original manufacturer, additional optical components are not allowed in hazardous locations. When installing the sensor, the safety lock device must be fitted at the cable connector. The additional adhesive warning label must be fixed to the connector housing at the connection cable. In dusty locations. the protection cap for the optical connection and for the socket must be fitted, when the connection cable or the POF's are NOT connected. Additional installation instruction only for ATEX applications:

The O/E-Converter Type PSN-TDN-LWL-OP is only applicable in the Ex Zones 2 and 22. The limited optical radiation can operate into hazardous locations 1, 2, 21, 22 over certificated fibre optics. It is necessary to take into consideration the valid international and national rules and regulations (EN 60079-14). The maximum rated input voltage Um = 30VDC must not be exceeded.

General mounting prescriptions:

Do not exceed the maximum ratings. The electrical connections must be exactly as shown in the connection diagram. The cable shield must be connected short. The cable shield must be connected to the protection earth, large-surfaced. Connection cables must not be installed parallel to high voltage cables. The O/E converters should be mounted stable and thermal conductive.

Function rotation speed detection:

(Mode Selection = 0V)

Light reflection alterations, generated by the turning marking disc of the spraying apparatus, will be amplified and formed.

(Mode Selection = +24V) Function needle detection:

Is the needle positioned in front of the fibre optic, the laser light will be reflected and the output switches to ON (+24V)

If no needle is recognized the output switches to OFF (0V).

Using the fibre optics

WARNING: The knurled nut for the POF fixation must only be screwed strong with fitted POF! The O/E Converter PSN-TDN-LWL-OP must not go into operation without mounted fibre optics. The fibre optics must be handled careful. For cutting the fibre optics the special cutter or a professional tool is to use. After cutting the fibres, push them well set into the adaptor and fasten the knuckled nut. The maximum length of fibre optics is dependent on type and fitting of the POF.

marking disc and the careful working up of the optical fibres. The fibre optics must not be buckled or laid with a small radius. Buckled or bad laid fibre optics results to a strong decrease of performance. Avoid performance decreasing and failures caused by wear, by a functional mounting of the fibre optics.

Maintenance

Protect the fibre optic adaptor of the sensor and the optical fibres against pollution. Please set up the protection caps if no optical fibres are connected. If the fibre optic adapter is contaminated, clean with alcohol. Do not use aggressive solvents. Plastic optical fibres can be destroyed by strong solvents. Equipment must only be repaired or serviced by the manufacturer.

Safety informations to hot housing surface

At a ambient temperature of +50°C, the self-heating DT of the sensor can reach 20K. Disconnect the sensor from power supply and let him cooling before touching.

Safety regulations for Laser devices class 2

By the installation, the going into operation and the application, it is necessary to take into consideration the valid rule EN 60825-1/-2 (Parts 12.5.1/12.6.2). Laser Class 2 without connected fibre optics. Do not stare into the beam!

General safety instructions:

"WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCA TIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES. DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS". The mounting of the sensor in dusty locations without fixed cordset or protection cap results in a high ignition risk. The sensors must not be used for Accident-Prevention! In worst case the output can change to any state! When installing and operating with the sensor, it is necessary to take into consideration the relevant international and other national regulations: EN 60079-14, single directive 1999/92/EC, UL 508, UL1604, UL2279 Non-Sparking Safe Apparatus for use in CL I, Division 2, GRP CD, Hazardous (Classified) Locations. The sensor and the fibre optic are conform to the following standards: UL 61010-1, ANSI/ISA 12.12.01-2013, UL 2279, UL 1604, UL 508, CAN/CSA C22.2 No. 213-M1987, EN 60079-0:2009, EN 60079-15:2010, EN 60079-28:2007, EN 60079-31:2010, EN 60825-1:2006, EN 60825-2:2004, EN 61000-6-1/-2, EN 61000-6-3/4, EN 60529:2000, ATEX directive: 94/9/EC, Machine directive: 2006/42/EC, EMC directive: 2004/108/EC, RoHS directive: 2011/65/EU.

General Notes, disposal

We reserve the right to modify our equipment. Our equipment is designed such way, that it has the least possible adverse effect on the environment. It neither emit or contain any damaging or siliconized substances and use a minimum of energy and resources. No longer usable or irreparable units must be disposed of in accordance with local waste disposal regulations.

**EC-Declaration of Conformity** 

UL-Recognized: File No. E300158. ATEX Declaration of conformity by manufacturer at 94/9/EC. ATEX Test Report: BVS PP 10-2233 EG, BVS 10 ATEX E 130 X. ATEX certification of quality type production of Ex devices at the directive 94/9/EC, CE 0158. Certification No: BVS 12 ATEX ZQS / E118, QAR No. DE/BVS/QAR13.0004/01. The conformity of the devices with the UL and EC standards and directives and the observation of the Quality Safety System ISO 9001:2008 with the ATEX module "Production", declares: Mode

Hans Bracher, Matrix Elektronik AG

Tippkemper - Matrix GmbH Meegener Str. 43 D-51491 Overath Tel.:+49 2206 9566-0 Fax -10

Info@tippkemper-matrix.com

Fax -29 (Manufacturer) 3 24 CH-5420 Ehrendingen 56 20400-20 Fax -2 Kirchweg

Page 2 of 2